

# Good practices

## Electrical Adjustable Table

1. Make sure the table's power cord is plugged in at a distance where it is not stretched taut when the table is at its maximum height.
2. Check that no object gets in the way of the table as it moves up and down (panels, furniture, chair, etc.).
3. Make sure weight is well distributed on the table so it is not off balance.
4. If an error code appears on the control pad, hold the down arrow until "reset" appears and keep pressing until the table rises.
5. If an error code appears and the "reset" operation isn't working, unplug the adjustable table, wait 30 seconds, then plug it back in.



artopex®