

TAKE OFF

Conference



installation guide


effective May 1st 2018

artopex®

conference tables with panel base



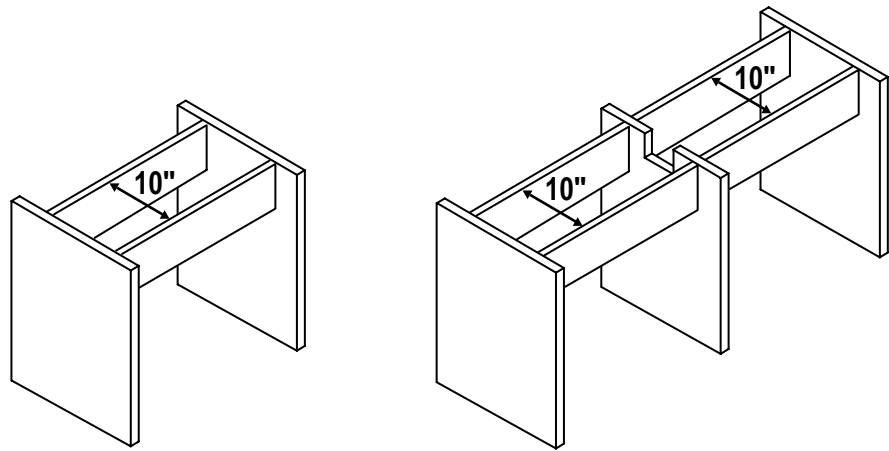


Step 1

- Assemble the modesty panels with the bases. The interior measurement between the modesty panels is always 10".



Step 2

- Center the base under the surface and assemble. Refer to the chart below for the "X" measurement.

Surfaces	Surface dimensions		X
	30	60	13
	30	72	16
	36	72	16
	36	84	19
	48	96	22
	48	120	22
	48	144	22
	48	168	22
	48	192	22
	54	96	22
	54	120	22

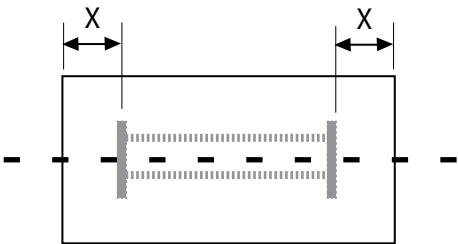


Table with 2 bases


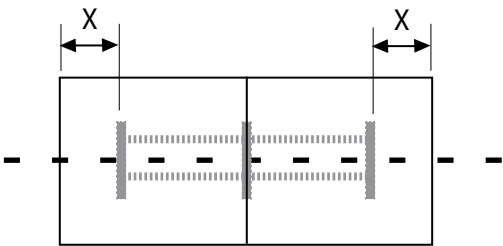


Table with 3 bases

conference tables with x-laminate bases

Step 1


- Assemble the modesty panels with the bases. The interior measurement between the modesty panels is always 10".

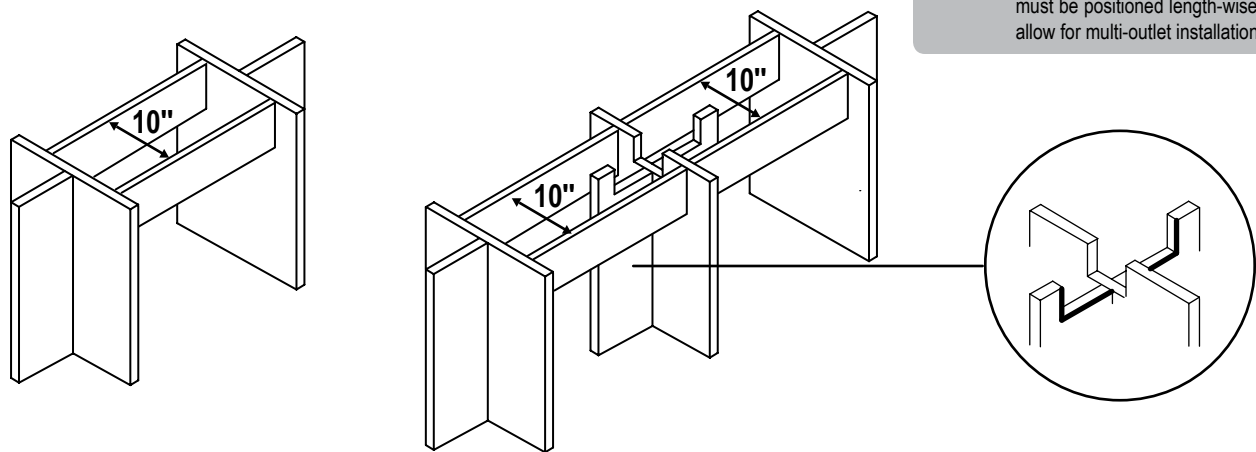

Step 2

- Center the base under the surface and assemble. Refer to the chart below for the "X" measurement.

Surfaces	Surface dimensions		X
	36	72	16
	36	84	19
	48	96	22
	48	120	22
	48	144	22
	48	168	22
	48	192	22
	54	96	22
	54	120	22

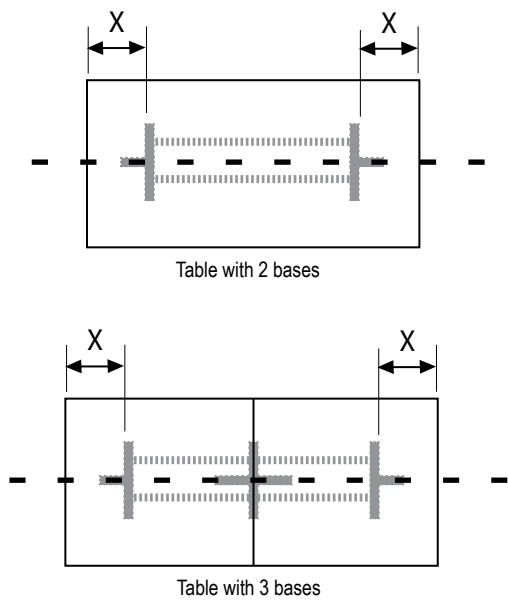


x-laminate bases

X-LAMINATE BASE ASSEMBLY


"T" shaped x-laminate base

Insert lateral base panel into the central panel.
Screw levellers and junction plates into both panels.

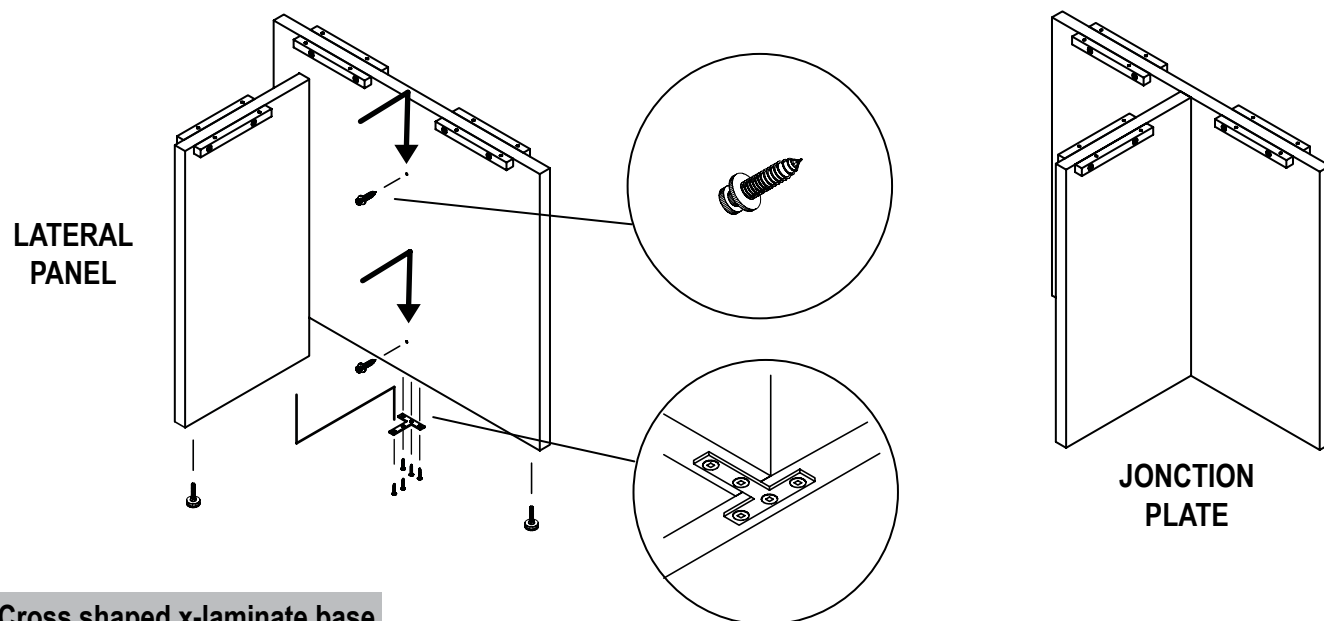

Cross shaped x-laminate base


Insert upper section of the base into lower section.
Screw levellers in both sections.

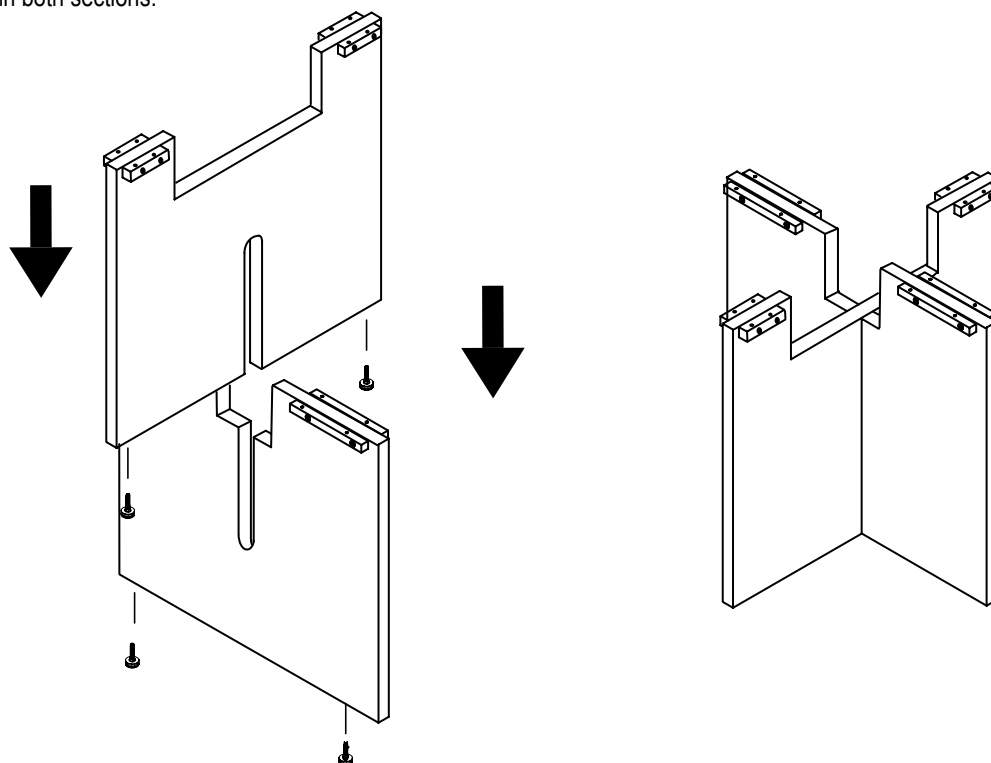

conference tables with rectangular architectural bases




Step 1

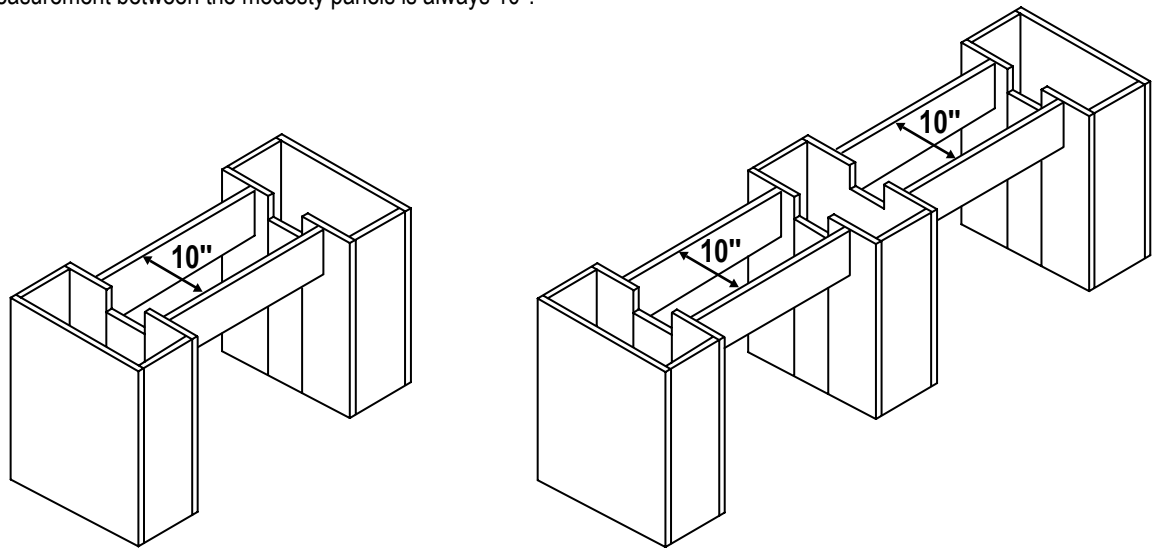- Assemble the modesty panels with the bases. The interior measurement between the modesty panels is always 10".



Step 2

- Center the base under the surface and assemble.
Refer to the chart below for the "X" measurement.

Surfaces	Surface dimensions		X
  	48	96	20
	48	120	20
	48	144	20
	48	168	20
	48	192	20

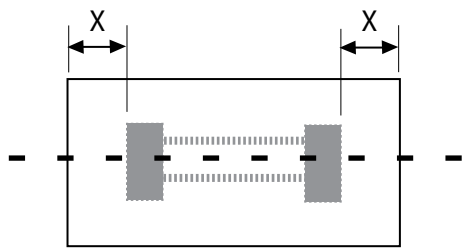


Table with 2 bases


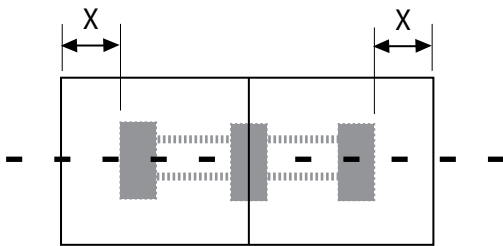


Table with 3 bases

conference tables with triangular architectural bases

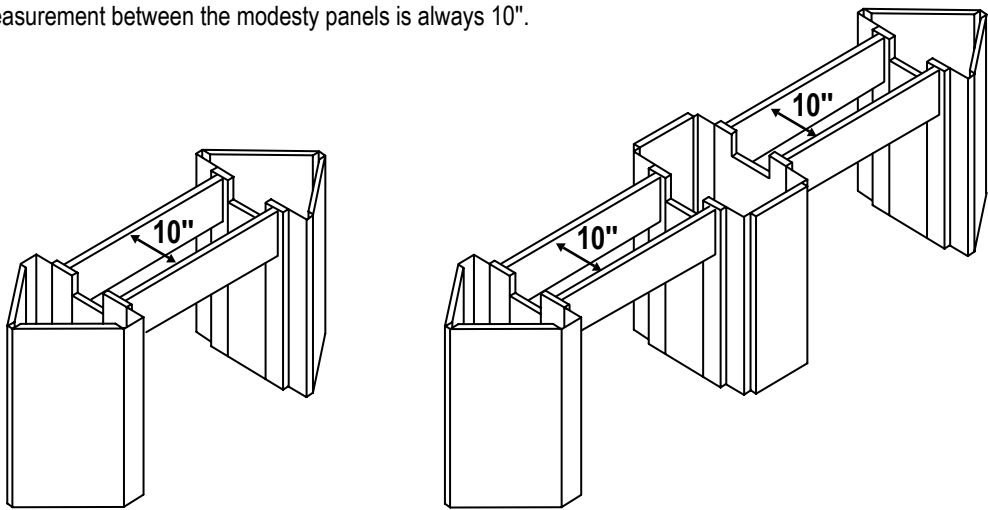


Step 1

- Assemble the modesty panels with the bases. The interior measurement between the modesty panels is always 10".



Step 2

- Center the base under the surface and assemble.
Refer to the chart below for the "X" measurement.

Surfaces	Surface dimensions		X
  	48	96	18
	48	120	18
	48	144	18
	48	168	18
	48	192	18

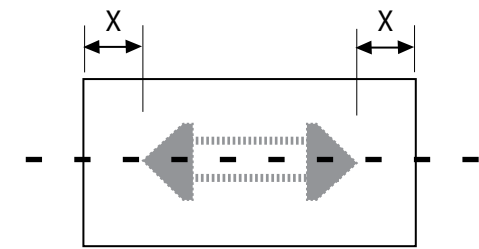


Table with 2 bases


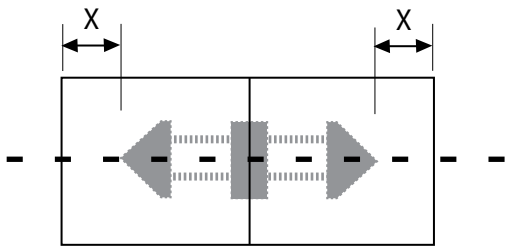


Table with 3 bases

conference tables with triangular and rectangular architectural bases


Step 1

- Assemble the modesty panels with the bases. The interior measurement between the modesty panels is always 10".

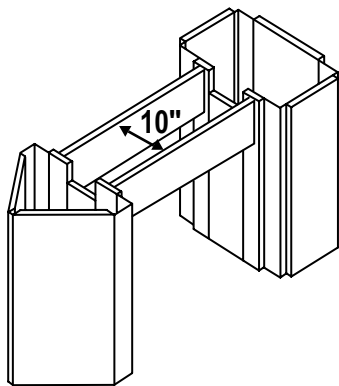



Step 2

- Center the base under the surface and assemble.
Refer to the chart below for the "X" measurement.


Surfaces	Surface dimensions		X
	54	96	20
	54	120	20



WARNING!
The 20" measurement is on the same side than the rectangular base.

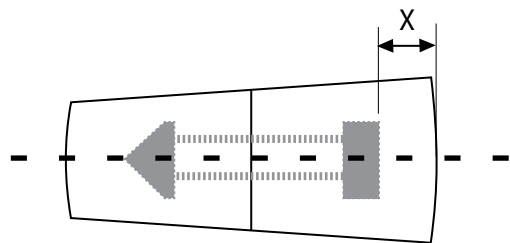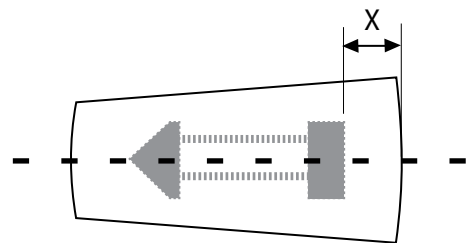

modular tables - "cage" base

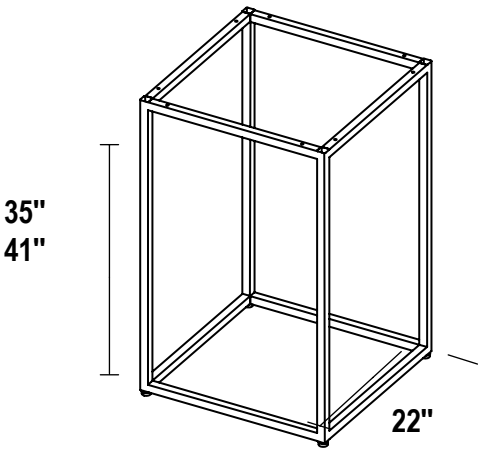

Step 1

- Center the bases in depth under the surface and assemble.
Refer to the chart below for the "X" measurement.

	Surfaces	Surfaces lenghts	X
2 bases		96	13
		90	11.5
		84	10
		78	8.5
		72	7
		66	5.5
		60	4
		54	2.5
		48	1
1 base		42	10
		36	7
		42	10
		36	7
		30	4
		30	4


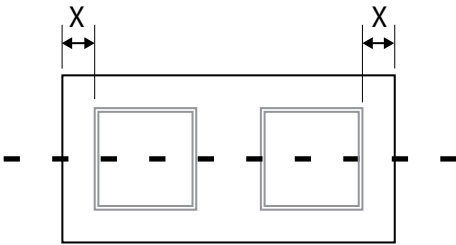


Table with 2 bases

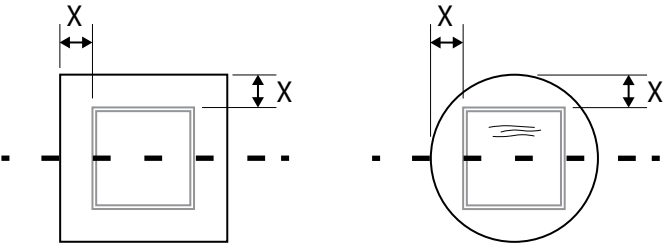


Tables with 1 base

modular tables – angled legs (metal or wood)


Step 1

- Use pre-drilled holes under the surface and the drawing below to position the legs under the table.
- 2 options offered: in parallel or at 45°


Metal leg

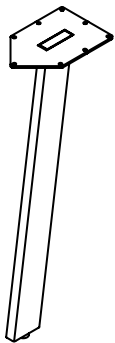


Wood leg

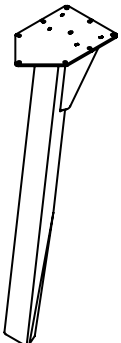



Parallel legs

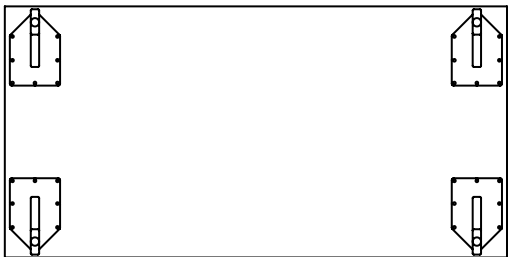



Metal
legs

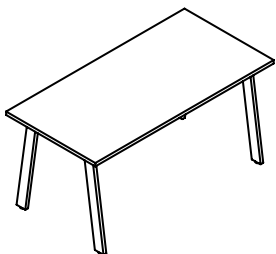

45° legs

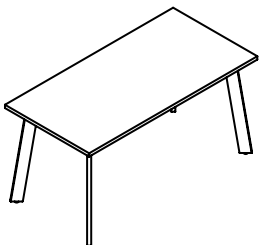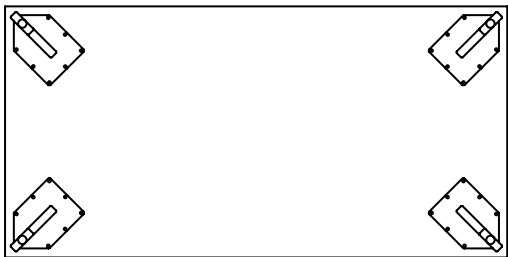



Wooden
legs

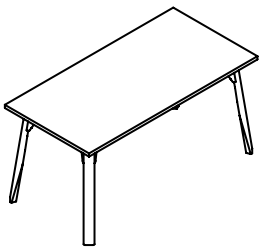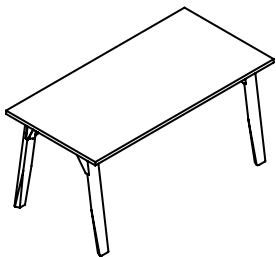

modular tables – central cable housing

Step 1


- Install the legs.
- Install the central cable housing under the surface as shown on the drawing below.
- Install multi-outlet in the central insert, if multi-outlet is planned.

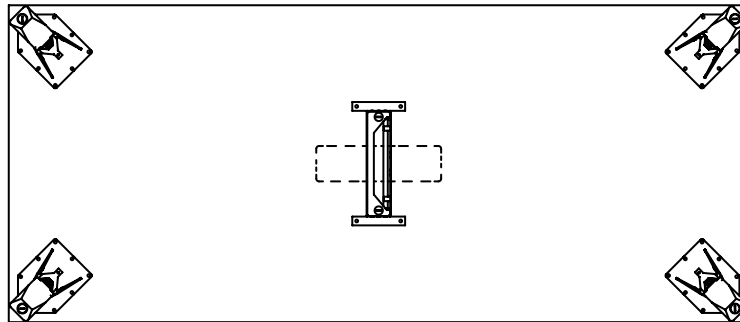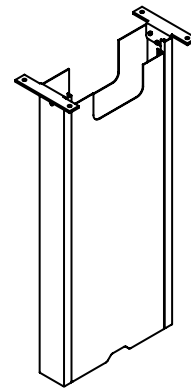



occasional tables

« Fences » base


- Use pre-drilled holes under the surface and the drawing below to position tubular hoops under the table.
- Use 3 screws per support plate.

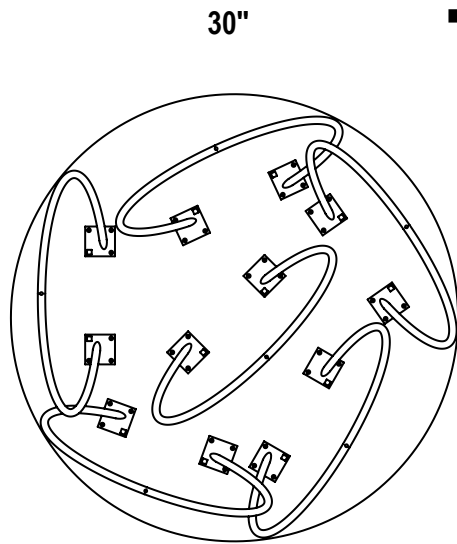

6 tubular hoops

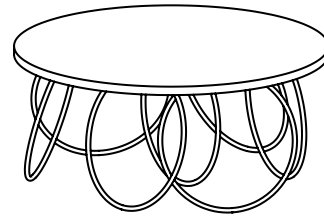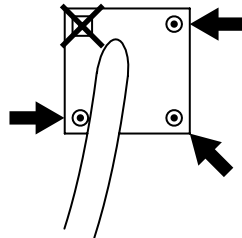



36"

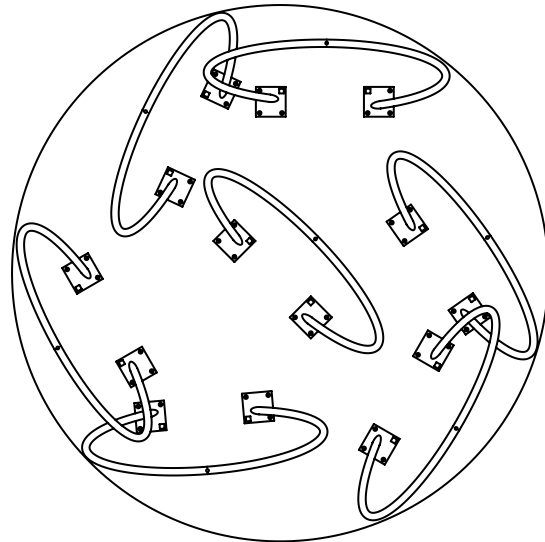

7 tubular hoops

Folded metal corner legs

- Use pre-drilled holes under the surface and the drawing below to position legs under the table.

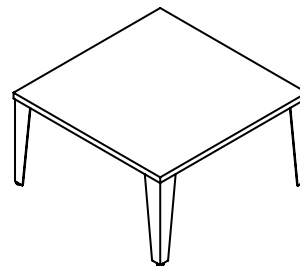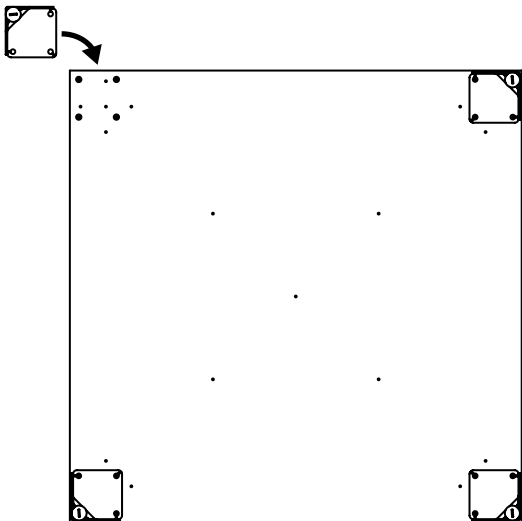

*Designing, manufacturing, advising, planning
and supporting: that's the art that
distinguishes our purpose at Artopex.*



HEAD OFFICE

800, Vadnais Street
Granby, Quebec
J2J 1A7
CANADA

Tel.: 450 378-0189
1 800 363-3040

Fax.: 450 378-9712

artopex.com